

INSTALLATION INSTRUCTIONS

No. 782-D SERIES SLIDING DOOR HARDWARE SETS WITH ONE PIECE FACIA RAIL

FOR 1-3/8" THICK DOORS WEIGHING UP TO 75 POUNDS

1. FINISHED OPENING SHOULD BE 1 3/4" HIGHER THAN HEIGHT OF DOOR (THIS ALLOWS MAXIMUM 1/2" FLOOR CLEARANCE) AND 1" NARROWER THAN TOTAL WIDTH OF 2 DOORS (FOR DOOR OVERLAP)
— SEE INSTALLATION GUIDE BELOW —

2. INSTALL RAIL USING LONG (1 1/4" x 7 ROUND HEAD) SCREWS LOCATING RAIL AS SHOWN AT RIGHT. (SEE FIG. A) CUT OFF RAIL TO FIT OPENING IF NECESSARY.

3. CHOOSE APPROPRIATE FRONT AND BACK HANGERS FOR DOOR THICKNESS AS SHOWN IN FIG. A.

INSTALLATION GUIDE


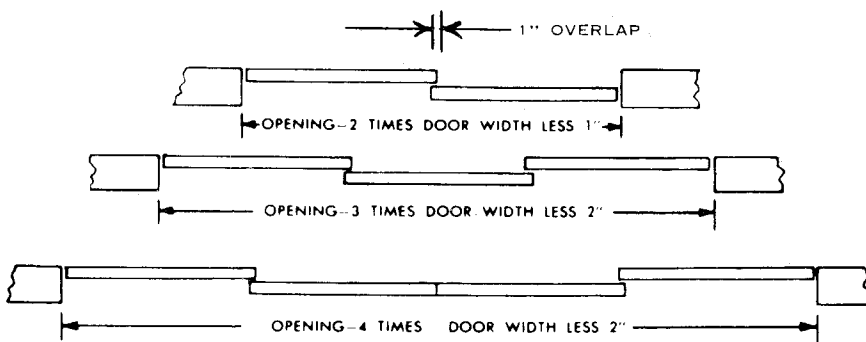


FIG. A
No. 782-D

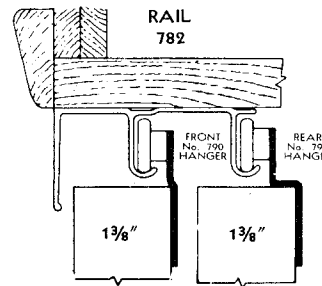


4. PLACE HANGER 3/4" FROM EDGE OF DOOR WITH HANGER OFFSET RESTING ON DOOR TOP. NOTE FIG. B.

INSTALL 3/4" x 7 ROUND HEAD PIVOT SCREW. TIGHTEN UNTIL HANGER PLATE IS JUST FREE TO PIVOT.

AS SHOWN IN FIG. B, PLACE DELRIN[®] CAM DIAL ON HANGER PLATE WITH HANGER PROJECTION ENGAGED IN OUTERMOST GROOVE OF DIAL. (BE SURE **NATIONAL** TRADEMARK ON DIAL APPEARS AT TOP). INSTALL 3/4" x 7 ROUND HEAD SCREW TO FASTEN CAM DIAL TO DOOR AND TIGHTEN CAM SCREW UNTIL POSITIVE SELF-LOCKING ACTION IS EVIDENT WHEN CAM DIAL IS ROTATED.

FIG. B

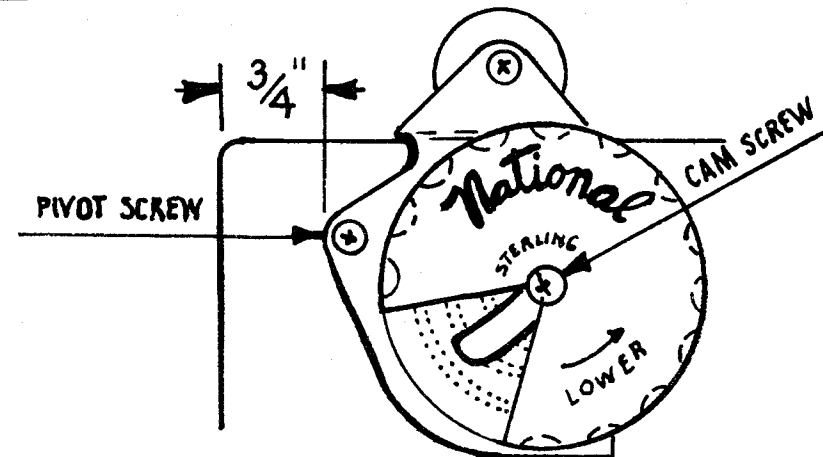

- 5.** PLACE WHEELS IN TRACK BY TILTING DOORS AS SHOWN IN FIG. C. MOUNT BACK DOOR FIRST.


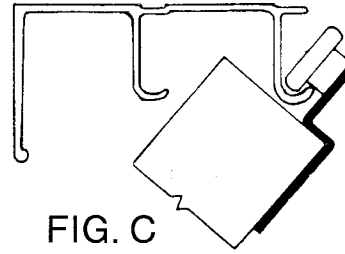


FIG. C

National[®]

Hardware
Makers
Since 1901

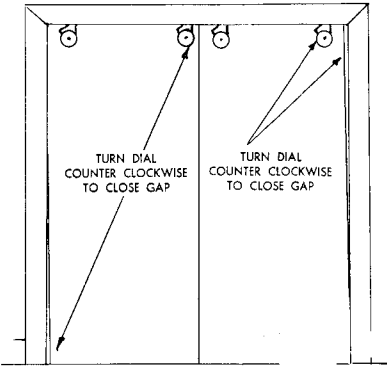

- 6.** TO PLUMB DOORS TO JAMB SEE FIG. D.

FIG. D

- 7.** INSTALL DOOR GUIDE (NO. 192) MOUNT CENTER SECTION FIRST, THEN MOUNT SIDE SECTIONS. USE CARDBOARD SHIM TO ASSURE PROPER SPACING OF SIDE SECTIONS. USE $\frac{3}{4}$ " x 7 ROUND HEAD SCREWS. NOTE FIG. E.


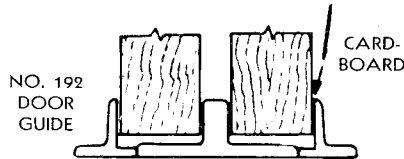


FIG. E

*Optional Accessories
Available From Your Dealer*
(Not Packed With Sets)




NO. 141
FLUSH
PULL

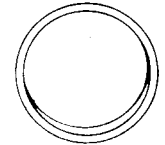

NO. 144
CUP PULL
Designed for
1- $\frac{3}{4}$ " hole



NO. 188 BUMPER

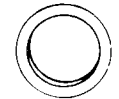

NO. 142
CUP PULL
Bore $\frac{3}{4}$ " hole

NATIONAL MANUFACTURING CO.
STERLING, ILLINOIS 61081